




**EXPANDABLE
ARRANGER E-A7**

USB SOUND SET

**ACTIVATION AND
INSTALLATION USER
MANUAL**

Activating the Protected USB Memory Stick on the Keyboard

1. Plug in your protected USB memory unit containing the sound set you purchased while your E-A7 keyboard is powered off.
2. After inserting the USB memory unit, turn on your keyboard with the on/off button.
3. After the opening screen of your keyboard, the activation message you will see below will appear on the screen. (This message will only appear at the time of the first installation, it will not appear when every keyboard is opened.) Make the final confirmation for the operation to take place by pressing the button corresponding to the "Yes" section at the bottom right of the screen.

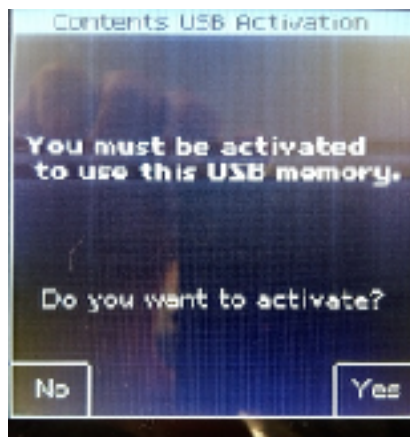

**If you press the button opposite the "No" option, the USB memory unit will not be activated and will be available on another E-A7.*

4. When the activation process is completed successfully, the screen you will see below will appear. Once the USB memory unit is activated, it cannot be used on another E-A7.



** If the activation process fails for any reason, a warning message will appear on the screen.*

How to Import Protected Tones from USB Memory Drive

< BACKUP File >

1. Press the MENU button on the front right panel of the E-A7.
2. On the page that opens, select Page 2 with "P2" at the bottom.
3. Select the "Utility" section with the help of the corresponding button.
4. Select the "Restore" option.

** Depending on the size of the backup file in MB, the loading time may vary and take a long time. Please wait patiently during the installation and do not cut off the power of your keyboard.*

< Tone Package (EAL) File >

1. Press the MENU button on the front right panel of the E-A7.
2. On the page that opens, select Page 2 with "P2" at the bottom.
3. On the newly opened page, select the "Utility" section with the help of the corresponding button.
4. On the newly opened page, select the "Import" option.



5. On the screen that appears, select the "Package" (EAL) file you want to import.
6. Select the location where you want to download the EAL file that will be uploaded later.
7. After selecting the location to install, the import process will begin.

Transfer Your Data from Protected USB Memory Drive to Another Unit


USB memory users may want to transfer their protected data to another unit due to the following situations.

- In case the processor motherboard of your E-A7 keyboard has changed due to a problem or malfunction,
- In case of purchasing future products that are compatible with the protected USB memory used,

In such cases, users can transfer their protected data to another unit by following the procedures below.

< Emptying Protected Data from the Keyboard >

1. Press and hold the MENU button on the front right panel of the E-A7 and then turn it on from the on/off button of your keyboard. Do not take your hand off the MENU button until "Maintenance Mode" appears on the LCD screen.
2. Plug the appropriate USB memory unit onto your E-A7 keyboard and select the discharging process with the button corresponding to the "Discharge" option on the screen.

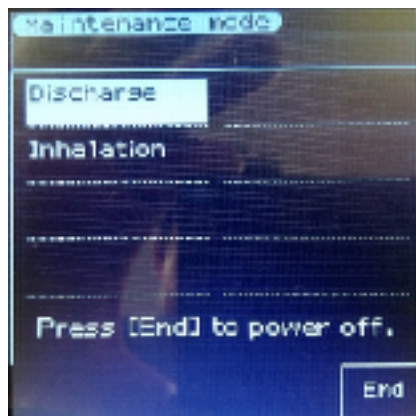

3. After your selection, select the "Exec" confirmation box on the screen with the button corresponding to it, and then confirm the newly appeared "Yes" confirmation box for the last time with the button corresponding to the bottom.
4. Once the process starts, your protected data (Sample Tones, Rhythms and Pads) will be transferred to the USB memory unit for reactivation.
5. After unloading, your protected data (Sample Tones, Rhythms and Pads) will not work and play on the E-A7.

** Error message will appear when you plug discharged protected USB memory to new unit. To correct this situation, you need to perform the "Inhalation" process as follows.*

< Importing Protected Data >

1. Press and hold the MENU button on the front right panel of the E-A7 and then turn it on from the on/off button of your keyboard. Do not take your hand off the MENU button until "Maintenance Mode" appears on the LCD screen.
2. Plug the appropriate USB memory unit onto your E-A7 keyboard and select the import operation with the button corresponding to the "Inhalation" option on the screen.
3. After your selection, select the "Exec" confirmation box on the screen with the button corresponding to it, and then confirm the newly appeared "Yes" confirmation box for the last time with the button corresponding to the bottom.
4. Once the process starts, your protected data (Sample Tones, Rhythms and Pads) will be transferred back into the E-A7 from your USB memory stick.
5. At the end of this process, you can play your protected Tones / Sample sounds on the E-A7 again.

** Import Valid Only;*

** When unloading is done to USB memory via the same E-A7,*

** When applied on an E-A7 that has never been unloaded*

ATTENTION:

- Before changing the product / purchasing a new product, users should unload one of the USBs preserved in their old product and have the new one imported. In a new product, they cannot use the existing protected USB after enabling the newly protected USB.
- The same protected USB memory cannot be used on more than one keyboard at the same time. If you want to use the contents of the protected USB memory on more than one instrument, you must purchase the same product.

Important notes:

- Some cheap/quality USB memory devices cannot perform protected operation due to hardware conditions. For this reason, when you try to do the unloading and importing operations with such USB sticks, the operation may not be possible. Please use high quality and high speed USB sticks.
- Protected USB sticks should not be formatted on the E-A7.
- Even if users copy their own protected tone data and Backup files to another USB stick, this data will not work on other users and other E-A7. (Even if Import / Export is done, protected tones will not work.)
- Even if the protected USB memory is copied before activation, it cannot be used by other users and gives a warning message as follows.

